

SPHERE PRO Installation and operation manual






September 2025 www.mageneco.com/us

INDEX

Торіс	Page
What is in the box	3
Overall dimensions	4
How to mount the unit to the wall	5
Plumbing diagram (typical)	6
Controller Installation	7
App installation and registration	13

What is in the box?

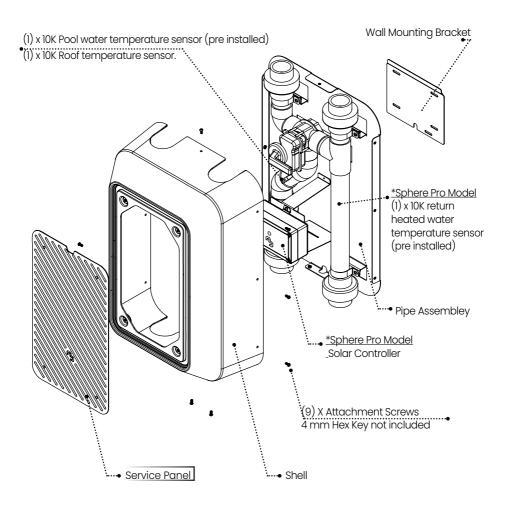


Overall dimensions




How to mount the unit to the wall


1. Install wall mounting bracket to wall at desired height and location (use a level)

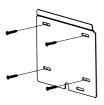

2. Mount the pipe assembly to the wall mounting bracket

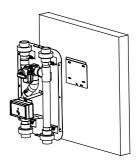


3. Assemble and glue To solar Pool & roof's feed and collectors return

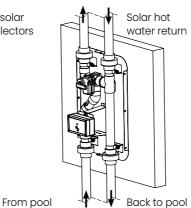


4. Assemble Shell and fasten (9) screws in place



5. Place service panel. Magnet's catches will self align and secure it in place

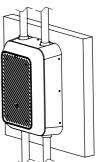

Plumbing diagram (typical)

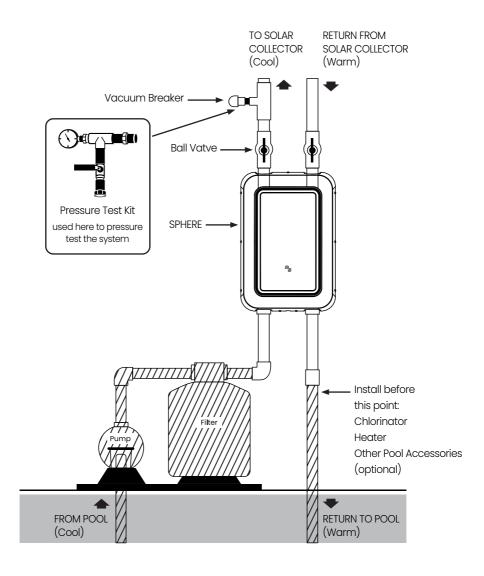

SPHERE PRO CONTROLLER

Installation

SPHERE Pro controller – General overview



- 1. Aux 1: Single speed Filtration Pump
- 2. Aux 2: Single speed Booster Pump
- 3. AC Wire Input (See Next Page)
- 4. AC 110/220V Selector (See Next Page)
- **5.** Pool water sensor
- 6. Roof sensor
- 7. Valve #1 Solar system Valve
- 8. Valve #3 & Valve #4 For Spa Isolation Feature
- 9. Solar Return water sensor
- 10. RS-485 Cable to VSF pump

Power specification:

- » 120 VAC, 0.4A 50/60 Hz.
- >> 240 VAC, 0.2A 50/60 Hz.

Output

- » (4) X 24 VAC (for valves actuators).
- (2) X High Voltage isolated contacts10 A at 120/240 VAC.

Input

3 x 10 K Ohm NTC Temperature sensors.


Communication

» RS-485

Wiring of a SPHERE Pro controller – AC WIRING DIAGRAM


110V AC WIRING

- 1. Ground screw attachment
- 2. Power Wire connector
- 3. Set switch to 115V

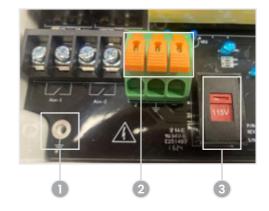

220V AC WIRING

- 1. Ground screw attachment
- 2. Power Wire connector
- 3. Set switch to 230V

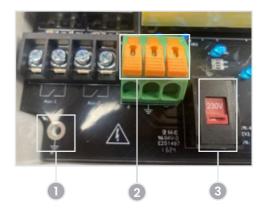


SPHERE Pro controller

Wiring a single speed Filtration pump and a Booster pump (optional)



AUX-1 and AUX-2 are dry contact relays for controlling high voltage devices up to 10 Amp per relay.

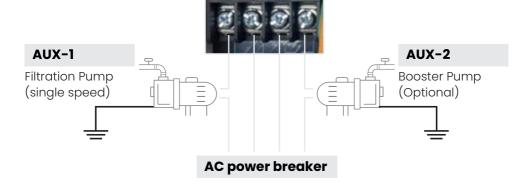


SPHERE Pro controller

Wiring a VSF Pump



The VSF pump is powered directly from the main AC power supply. It is controlled Via the RS485 communication cable (supplied with the pump).

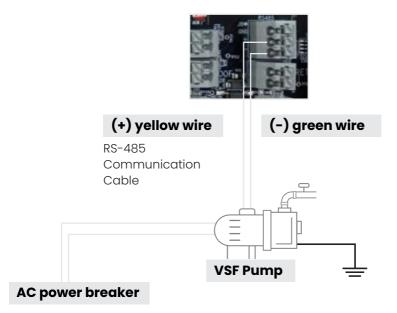

Interacting with a Variable speed pump (PENTAIR - IntelliFlo®)

- The SPHERE-Pro unit communicates with a VSF pump via the RS485 cable. However, the user must activate the "VSF PUMP" feature (see page 11) in order for the unit to take control of the pump. In this mode the pump's onboard screen and dash will be deactivated.
- The pump must be turned on before activating it from the app. indication light of the "Start\Stop" button should be on.



Installing Conduit and wire to the enclosure

- » Use No. 14 min to No. 6 max AWG for power relay circuits depending on power requirements.
- » Supply circuit must be protected by suitable circuit breaker



HIGH VOLTAGE SIDE LOW VOLTAGE SIDE

For AC input power conductors.
½ NPT Conduit

For low voltage conductors (temperatures sensors, valve actuators, RS485 communication cable)

SPHERE PROApp setup and operation

Download links for My SPHERE App


Link to App for IOS:




Link to App for Android:



Registration

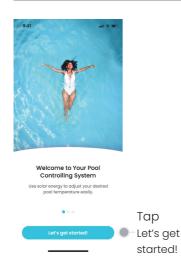

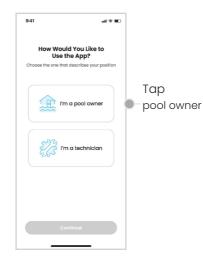





Choose to continue with your Apple/Google account or enter your e-mail



Pairing the controller unit to your phone

The App will need your permission to access your Camera, Bluetooth and location for easy pairing.







Scan your unit QR code or choose to enter manually Once the unit is paired to you phone, you will need to connect the unit to your home WIFI network. Stay in close proximity to the controller unit for this step.

If a technician has pre installed your system, continue to setup your WIFI connection.

If you are installing the system by your own, the app will ask you to define your solar system before continuing (see next page)









The App is set up and ready to use. See page 21 for operation manual


Installing your own system

When installing the system independently, you will need to define the system configuration. **Stay in close proximity to the controller unit for this step.**



Pool location:

The location of the pool will determine the time zone used by the pump's schedule.

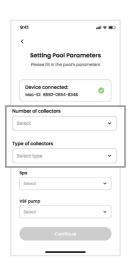

The number and type of collectors are required for service and maintenance purposes

Installing your own system



SPA:

If your pool plumbing includes a spa isolation bypass and you have two (2) 3-way valves with 24V AC actuators operating this bypass, you can operate them using the controller. In this case, make sure to activate this option in the Spa menu



VSF - Variable Speed Pump:

The SPHERE Pro controller can control a PENTAIR IntelliFlo® VSF pump.

To access the full functionality of the controller, connect the pump's communication cable to the SPHERE Pro controller (see page 11), and select the 'YES' option from the drop-down menu.

*Note – if using a single speed pump, select 'No' in this menu.



VSF speed setting:

You can change the default speed settings for the four (4) programs. This can also be done at any time through the App's configuration menu.

Installing your own system




Cleaning schedule:

You can set up to four (4) schedules for operating your filtration pump. This can also be done at any time through the App's configuration menu.

Enter a start time, end time and days of the week.


Connect the controller to your home WIFI network:

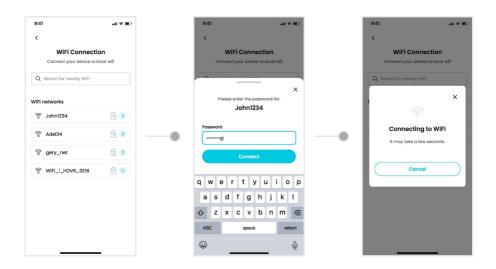


SPHERE PRO

App User's guide

Home screen

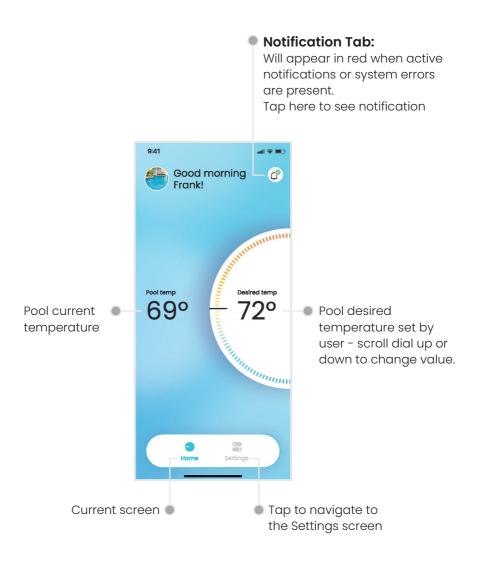


Setting screen

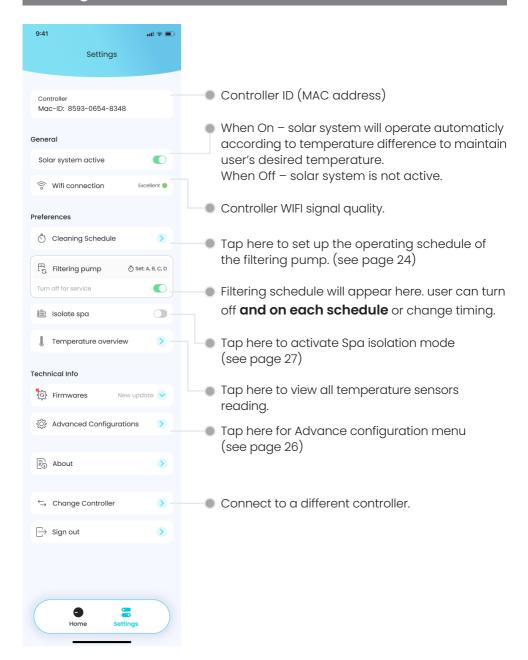

Filtering pump schedule

The SPHERE Pro controller allows the user to operate the pool filtration pump via the app, provided the pump is properly wired and connected to the controller (as illustrated on page 10-11).


On this screen, the user can configure up to four (4) distinct time slots for automatically turning the filtration pump on and off within a 24-hour period, for each day of the week.

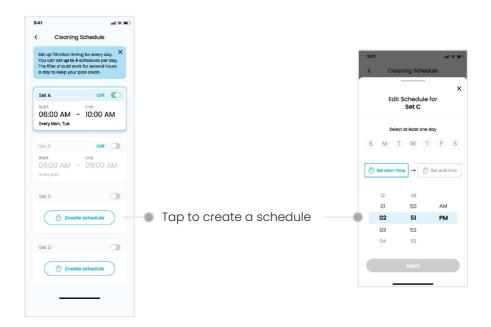

Set the start time, end time, and select the days of the week on which the filtration pump should operate.


Filtering pump schedule (continued)

After configuring the schedules, the user can easily enable or disable each one through the Settings menu.

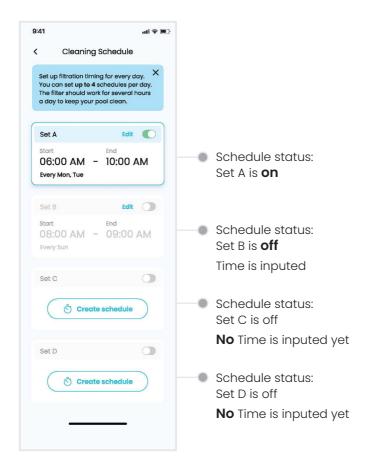


Advance configuration

In this menu, user can access advantaged operating modes:

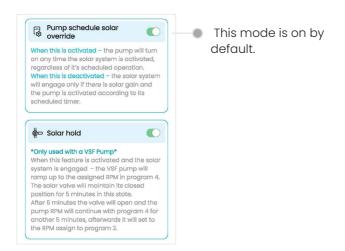


Advance configuration (continued)

After configuring the schedules, the user can easily enable or disable each one through the Settings menu.

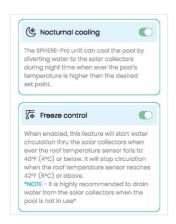


Advance configuration (continued)

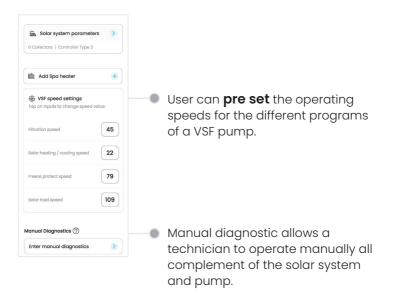

Spa isolation mode

If your pool plumbing includes a spa isolation bypass and you have two (2) 3-way valves with 24V AC actuators operating this bypass, you can operate them using the controller. In this case, make sure to activate this option in the Spa menu

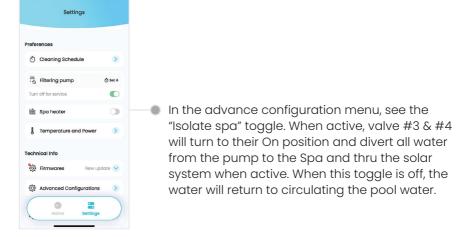



www.mageneco.com/us